

Distributor Sales and Technical Support
Topac Inc., 231 CJC Hwy Cohasset MA 02025
 USA Tel: 781 740 8778 Fax: 781 740 8779
 Email sales@topac.com
 Internet: http://www.topac.com

HD 45..., HD 46...



HD45... AND HD46... SERIES TRANSMITTERS AND REGULATORS FOR HUMIDITY, TEMPERATURE AND CO₂

- The instruments of the series HD45 and HD46 are transmitters, indicators and regulators, to monitor and control:
 - Relative humidity (RH)
 - Ambient temperature (T)
 - Carbon dioxide (CO₂)
 - Dew point temperature (DP, calculated measurement)
- They are suitable for monitoring indoor air quality. Typical applications would be air quality in institutional buildings, factories and workplaces where there are large gatherings of people (schools, hospitals, auditoriums, cafeterias, etc.) The instrument facilitates the automatic adjustment of air conditioning (temperature and humidity) and ventilation (changes air/hour) in order to achieve good air quality according to the ASHRAE and IMC standards as well as promoting energy savings. The measurement of RH (Relative Humidity) is done with a capacitive sensor. In models HD46 ... the relative humidity and temperature sensor with their calibration data are contained within an easily replaceable module. The instrument can also calculate the dew point. The temperature T is measured with a high precision NTC sensor. The measurement of CO₂ (carbon dioxide) is obtained with a special infrared sensor (NDIR technology: Non-Dispersive Infrared Technology). A protective membrane, protects the sensor from dust and weather. The instruments are factory calibrated and require no further adjustment by the installer. The HD46 variant is supplied with a key pad enabling the unit to be set up without the need for a PC

The instruments are wall mounted indicator panels with the sensors installed inside the housing. The LCD display allows simultaneous viewing of all values measured. The operation of the relay is very versatile, having modes of activation above and below the threshold, and single or double threshold modes. The thresholds are configurable by the user throughout the measurement range. All the functions of the instrument can be configured quickly and intuitively through a PC. The instruments are easy to use and offer many configuration possibilities. They are supplied with a standard configuration that makes them ready to use out of the box. The HD46... can be equipped with keyboard that allows you to easily configure the instrument even without a PC connection. The models having a keypad are fitted with back-lit display, activated by the touch of a button. Models of the series HD45... with relay have a switch that allows quick selection of the threshold between a set of preset values. All models include the continuous logging so that data can be transferred to a PC. The instruments work with 24Vac or 15...35Vdc power supply

Technical data Characteristics of the sensors

Relative humidity RH (for models HD45 17..., HD46 17... and HD46 17B...)	
Sensor	Capacitive
Measuring range	0...100 % RH -40...+85°C Dew point Td
Working range of the sensor	-40...+80°C
Accuracy	±2.5%RH (0...90%RH) ±2%RH (elsewhere) for T=15...35°C ±(1.5+1.5% of the measure)%RH for T=40...+80°C For the dew point please see the relevant table
Resolution	0,1%
Temperature dependence	2% on the whole temperature range
Hysteresis and repeatability	1%RH
Response time (T ₉₀)	<20 sec. (air speed = 2m/sec and stable temperature)
Long-term stability	1%/year

Temperature T (for models HD45 17..., HD45 7B..., HD46 17... and HD46 17B...)	
Sensor type	NTC 10kΩ
Measuring range	-30...+85°C (-22...+185°F)
Accuracy (except for models with current outputs)	±0.2°C ±0.15% of the measured value within 0...70°C ±0.3°C ±0.15% of the measured value within -30...0°C and 70...85°C
Accuracy (for models with 4÷20mA)	±0.5°C ±0.15% of the measured value within -30°C...+85°C
Resolution	0,1°C
Response time (T ₉₀)	<30 sec. (air speed = 2m/sec)
Long-term stability	0.1°C/year

Carbon dioxide CO ₂ (for models HD45 7B..., HD45 B... and HD46 17B...)	
Sensor	Dual wavelength NDIR
Measuring range	0...5000 ppm
Working range of the sensor	0...50°C
Accuracy	±(50ppm+3% of the measured value) @ 20°C and 1013hPa
Resolution	1ppm
Temperature dependence	0,1%f.s./°C
Response time (T ₉₀)	<120 sec. (air speed = 2m/sec and stable temperature)
Long-term stability	5% of the measured value /5years

Accuracy of the dew point Td (°C)

The dew point is a calculated quantity that depends on the accuracy of the calibration of relative humidity and temperature.

Temperature (°C)	Relative humidity(%)						
	-20	10	30	50	70	90	100
-20	0.92	0.49	0.30	0.22	--	--	--
0	1.05	0.56	0.35	0.25	0.20	0.18	0.18
20	1.18	0.75	0.45	0.34	0.27	0.23	0.23
50	1.27	0.88	0.56	0.42	0.33	0.30	0.30
100	1.30	1.17	0.76	0.58	0.47	0.42	0.42

Characteristics of the instrument


Measuring frequency	1 sample every 3 seconds
Storage capacity	2304 records
Storage interval	Selectable within 30s, 1m, and 5m The stored values represent the average values of samples collected every 3 seconds in selected storage interval.
Serial output	Serial output for USB (mini- USB/USB cable with adapter cod. RS45 or RS45I) RS485 MODBUS-RTU (only HD45...S... and HD46...S...)
Safety of stored data	Unlimited
Analogue output	0...10Vdc ($R_L > 10k\Omega$) (only HD45...V... and HD46...V) 11Vdc outside the measuring range 4±20mA ($R_{L\text{ MAX}} = 400\Omega$) (only HD45_A and HD46_A) 22mA out of the measuring range Active current output
Relay output	Two-state (only HD45...R and HD46...R) Contact: max 1A @ 30Vdc resistive load
Power supply	24Vac ± 10% (50...60Hz) or 15...35Vdc
Power consumption	100 mW (except of the models with current output) 400 mW (for the models with current output)
Stabilizing time	15 minutes (to guarantee the declared accuracy)
Working temperature of the instrument	0°C ... 50°C
Working humidity of the instrument	0%RH ... 90%RH no condensate
Dimensions (LxHxW)	80 x 80 x 30 mm (HD45.17...) 80 x 80 x 34 mm (HD45.B... and HD45.7B...) 120 x 80 x 30 mm (HD46.17...) 120 x 80 x 34 mm (HD46.17B...)
Housing material	ABS
Weight	50g
Protection degree	IP30

Installation


The container is easy and quick to open. Simply press the two tabs of the container to remove the front panel and have immediately available the terminal block connections and fixing holes.

Electrical connections

Series HD45...

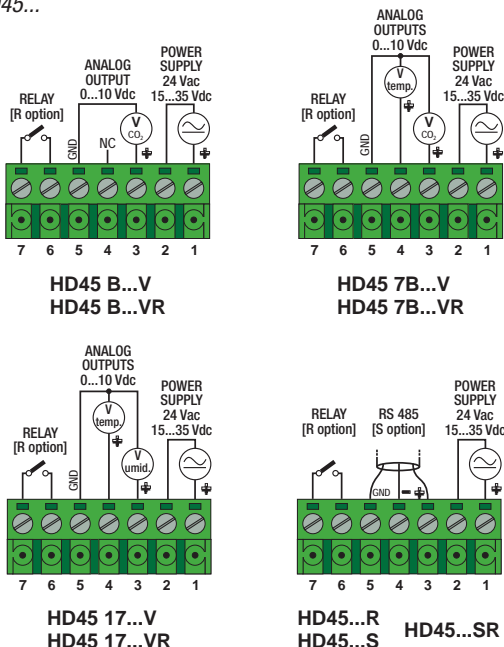

Series HD46...

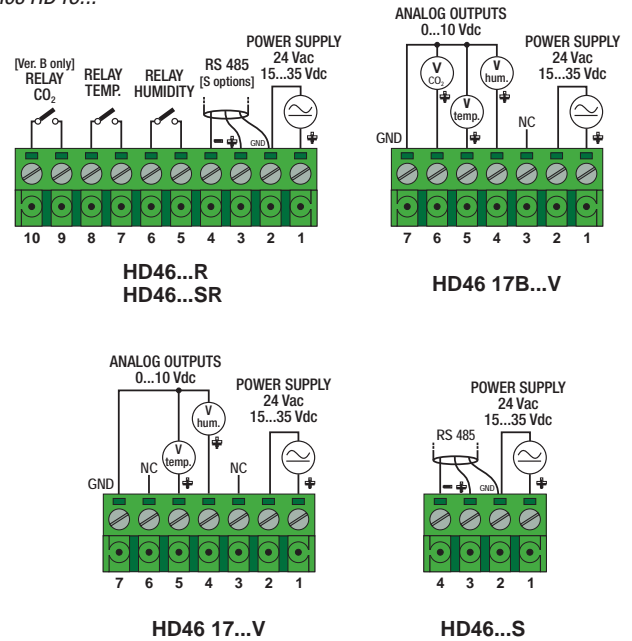


Configuration

The instruments are equipped with serial output easily accessible on the side of the instrument that allows you to connect to the USB port of your PC via the cable **RS45** or **RS45I** with built-in adapter, for custom configurations. With the **RS45** cable the instrument is powered directly from the USB port of your PC, thus allowing the configuration of the instrument in the field using a laptop before installing fixed.

RS485 Connection


Models with RS485 output function using the **MODBUS RTU** protocol. For PC connection, insert a converter RS232C/RS485 or USB/RS485.

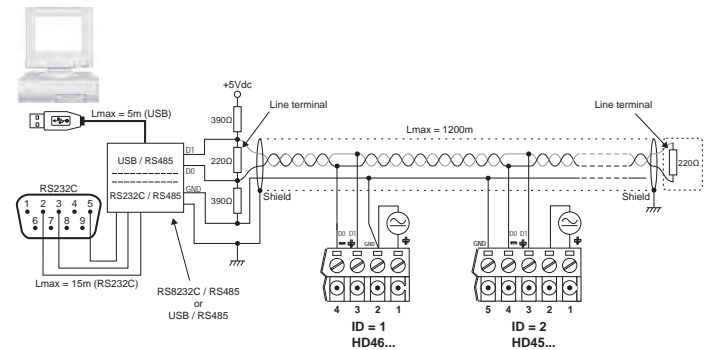


Dimensions of the housing

All dimensions are expressed in mm.


Series HD45...

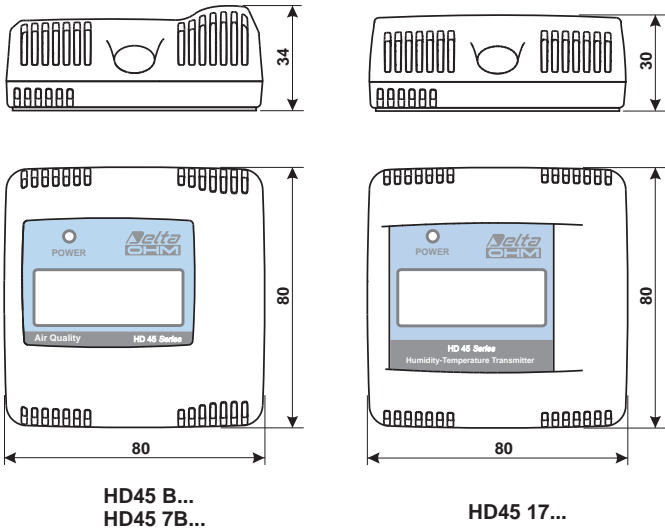



Series HD46...

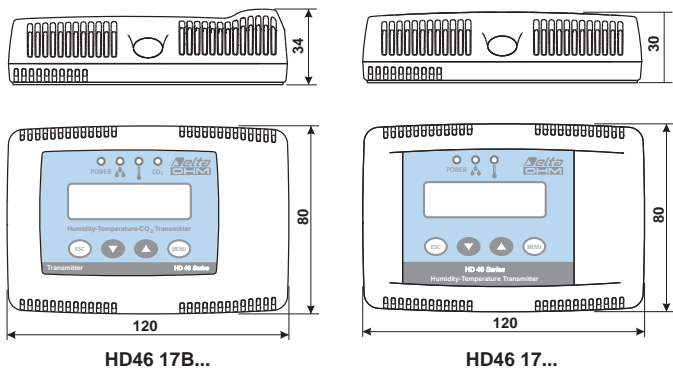

Fixing holes

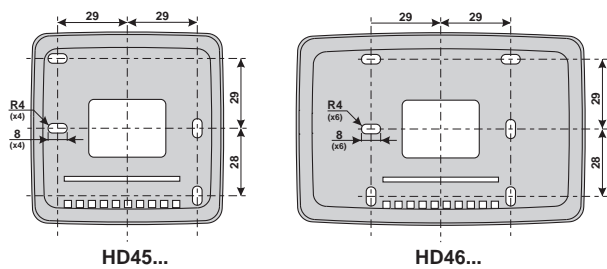

ORDERING CODES

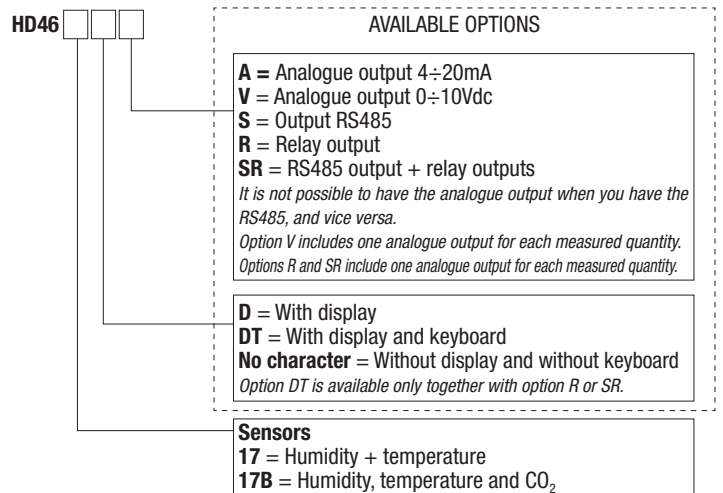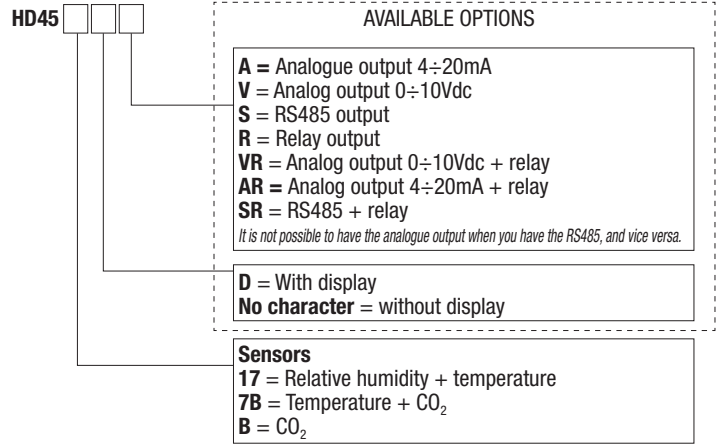

AVAILABLE MODELS

The instruments are available in the following versions:

- HD45 17...** Humidity and temperature
- HD45 7B...** Temperature and CO₂
- HD45 B...** CO₂
- HD46 17B...** Humidity, temperature, and CO₂
- HD46 17...** Humidity and temperature

Upon request it is possible to have the option with 0 ... 10Vdc analogue output (option **V**) or 4÷20mA option (option **A**) for each quantity measured by the instrument or RS485 MODBUS-RTU serial output (option **S**). There are no models with both types of output.

It is available the option with relay only (option **R**). In models **HD46 ...** there is one relay for each quantity measured by the instrument. In models **HD45 ...** there is one relay that can be associated with one of the quantities measured by the instrument.

It is possible to have the relay output (or outputs) together with serial output RS485 MODBUS-RTU (option **SR**).

The relay output together with the analogue output (option **VR** or **AR**) is available only on the models **HD45...**

All models can be supplied with LCD (option **D**).

In the series **HD46 ...** versions with relay outputs are available with display and keyboard (option **DT**)



The following table lists the available models:

Model	RH	T	CO ₂	Analog output	RS485 output	Relay output	LCD	LED
HD45 17V	✓	✓		✓ (2 outputs)				Power
HD45 17A	✓	✓		✓ (2 outputs)				Power
HD45 17S	✓	✓			✓			Power
HD45 17R	✓	✓				✓ (1 output)		Power
HD45 17SR	✓	✓			✓	✓ (1 output)		Power
HD45 17VR	✓	✓		✓ (2 outputs)		✓ (1 output)		Power
HD45 17AR	✓	✓		✓ (2 outputs)		✓ (1 output)		Power
HD45 17DV	✓	✓		✓ (2 outputs)			✓	Power
HD45 17DA	✓	✓		✓ (2 outputs)			✓	Power
HD45 17DS	✓	✓			✓		✓	Power
HD45 17DR	✓	✓				✓ (1 output)	✓	Power
HD45 17DSR	✓	✓			✓	✓ (1 output)	✓	Power
HD45 17DVR	✓	✓		✓ (2 outputs)		✓ (1 output)	✓	Power
HD45 17DAR	✓	✓		✓ (2 outputs)		✓ (1 output)	✓	Power
HD45 7BV	✓	✓		✓ (2 outputs)				Power
HD45 7BA	✓	✓		✓ (2 outputs)				Power
HD45 7BS	✓	✓			✓			Power
HD45 7BR	✓	✓				✓ (1 output)		Power
HD45 7BSR	✓	✓			✓	✓ (1 output)		Power
HD45 7BVR	✓	✓		✓ (2 outputs)		✓ (1 output)		Power
HD45 7BAR	✓	✓		✓ (2 outputs)		✓ (1 output)		Power
HD45 7BDV	✓	✓		✓ (2 outputs)			✓	Power
HD45 7BDA	✓	✓		✓ (2 outputs)			✓	Power
HD45 7BDS	✓	✓			✓		✓	Power
HD45 7BDR	✓	✓				✓ (1 output)	✓	Power
HD45 7BDSR	✓	✓			✓	✓ (1 output)	✓	Power
HD45 7BDVR	✓	✓		✓ (2 outputs)		✓ (1 output)	✓	Power
HD45 7BDAR	✓	✓		✓ (2 outputs)		✓ (1 output)	✓	Power
HD45 BV				✓ (1 output)				Power
HD45 BA				✓ (1 output)				Power
HD45 BS					✓			Power
HD45 BR						✓ (1 output)		Power
HD45 BSR					✓	✓ (1 output)		Power
HD45 BVR				✓ (1 output)		✓ (1 output)		4 LED CO ₂ level
HD45 BAR				✓ (1 output)		✓ (1 output)		4 LED CO ₂ level
HD45 BDV				✓ (1 output)			✓	Power
HD45 BDA				✓ (1 output)			✓	Power
HD45 BDS					✓		✓	Power
HD45 BDR						✓ (1 output)	✓	Power
HD45 BDSR					✓	✓ (1 output)	✓	Power
HD45 BDVR				✓ (1 output)		✓ (1 output)	✓	Power
HD45 BDAR				✓ (1 output)		✓ (1 output)	✓	Power

Model	RH	T	CO ₂	Analog output	RS485 output	Relay output	LCD keyboard	LED
HD46 17V	✓	✓		✓ (2 outputs)				Power
HD46 17A	✓	✓		✓ (2 outputs)				Power
HD46 17S	✓	✓			✓			Power
HD46 17R	✓	✓				✓ (2 outputs)		Power UR + T
HD46 17SR	✓	✓			✓	✓ (2 outputs)		Power UR + T
HD46 17DV	✓	✓		✓ (2 outputs)			only LCD	Power
HD46 17DA	✓	✓		✓ (2 outputs)			only LCD	Power
HD46 17DS	✓	✓			✓		only LCD	Power
HD46 17DTR	✓	✓				✓ (2 outputs)	✓	Power UR + T
HD46 17DTSR	✓	✓			✓	✓ (2 outputs)	✓	Power UR + T
HD46 17BV	✓	✓		✓ (3 outputs)				Power
HD46 17BA	✓	✓		✓ (3 outputs)				Power
HD46 17BS	✓	✓			✓			Power
HD46 17BR	✓	✓				✓ (3 outputs)		Power UR + T+ CO ₂
HD46 17BSR	✓	✓			✓	✓ (3 outputs)		Power UR + T+ CO ₂
HD46 17BDV	✓	✓		✓ (3 outputs)			only LCD	Power
HD46 17BDA	✓	✓		✓ (3 outputs)			only LCD	Power
HD46 17BDS	✓	✓			✓		only LCD	Power
HD46 17BDTR	✓	✓				✓ (3 outputs)	✓	Power UR + T+ CO ₂
HD46 17BDTSR	✓	✓			✓	✓ (3 outputs)	✓	Power UR + T+ CO ₂

EXAMPLES OF ORDERING CODES*

- HD45 7BDVR:** Transmitter, indicator and regulator for temperature and CO₂. Two analogue outputs 0 ÷ 10V, one configurable relay to control temperature or CO₂.
 - HD45 BVR:** Transmitter, indicator and regulator for CO₂. Without display, with LED indicators of the CO₂ level, with analogue output 0 ÷ 10V, with relay.
 - HD45 17VR:** Transmitter and regulator for humidity and temperature. Without display, with two analogue outputs 0 ÷ 10V, one configurable relay to control the humidity or temperature.
 - HD45 17AR:** Transmitter and regulator for humidity and temperature. Without display, with two analogue outputs 4÷20mA, one configurable relay to control humidity or temperature.
 - HD45 17DV:** Transmitter and indicator for humidity and temperature. With display, two analogue outputs 0 ÷ 10V, without relay.
 - HD45 7BSR:** Transmitter and regulator for temperature and CO₂. Without display, with RS485 output, no analogue output, with one configurable relay to control temperature or CO₂.
 - HD46 17BDV:** Transmitter and indicator for humidity, temperature and CO₂. With display, without keyboard, with three analogue outputs 0 ÷ 10V, without relays and without RS485.
 - HD46 17BDTSR:** Transmitter, indicator and regulator for humidity, temperature and CO₂. Display and keyboard, three relay outputs, RS485 output.
 - HD46 17S:** Humidity and temperature transmitter. No display and no keyboard, no relays, with RS485 output.
- * All models include **DeltaLog14**, software (downloadable from Delta OHM website) for connecting to the PC via the serial output, for the configuration of the instrument and data download. For Windows® operating systems.

ACCESSORIES

- HDM46:** Calibrated humidity and temperature replacement module (only for models HD46...)
- RS45:** **Not isolated** serial connection cable with built-in adapter. USB connector for PC and mini-USB connector for the serial port of the instrument. The cable powers the instrument.
- RS45I:** **Isolated** serial connection cable with built-in adapter. USB connector for PC and mini-USB connector for the serial port of the instrument. The cable does not power the instrument.



HDM46